RVSEATCOVERS

SEAT COVER INSTALLATION GUIDE



Step 1:

Slide the Backrest Cover First: Start by sliding the seat back cover over the top of the seat. Make sure it aligns properly with the seat's shape. Ensure that any holes for armrests on the sides line up correctly.





Step 2: (not applicable to all)

Tuck in any straps or fabric through where the backrest meets the bottom cushion and push them through to the rear side.







Step 3:

Place the bottom cushion cover and push straps on the rear on the rear of the cover through the gap where the backrest meets the bottom cushion. Grab the straps from behind the backrest and loop it underneath the bottom cushion.

If you are not able to push a strap all the way through the gap on the backrest, you can attach the White Octagon pieces to the rear straps and push them push through the gap and the size of octagon will prevent it from sliding out.

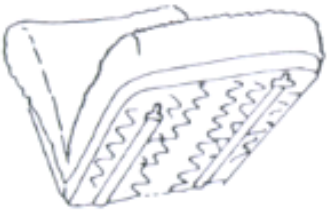

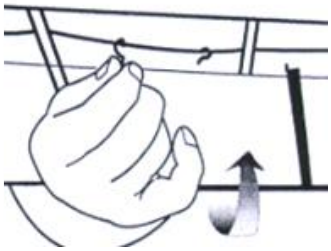

Step 4:

Option 1: If the straps have buckles, attach them to the front buckles and secure and tighten.

Option 2: If your straps do not have buckles, attach the straps to the metal clips and secure them wherever there is metal underneath the bottom cushion.



Step 5:

Double check you have the correct Armrest for each side and insert them rear end first at the front of the arm.



Step 5:

Some seat covers come with straps with alligator clips. These are optional and can be used to tuck in the side skirts underneath the bottom cushion so they are out of view. Simply clip each end and tuck in underneath.